


Please read over the step-by step instructions to insure easy and quick assembly.

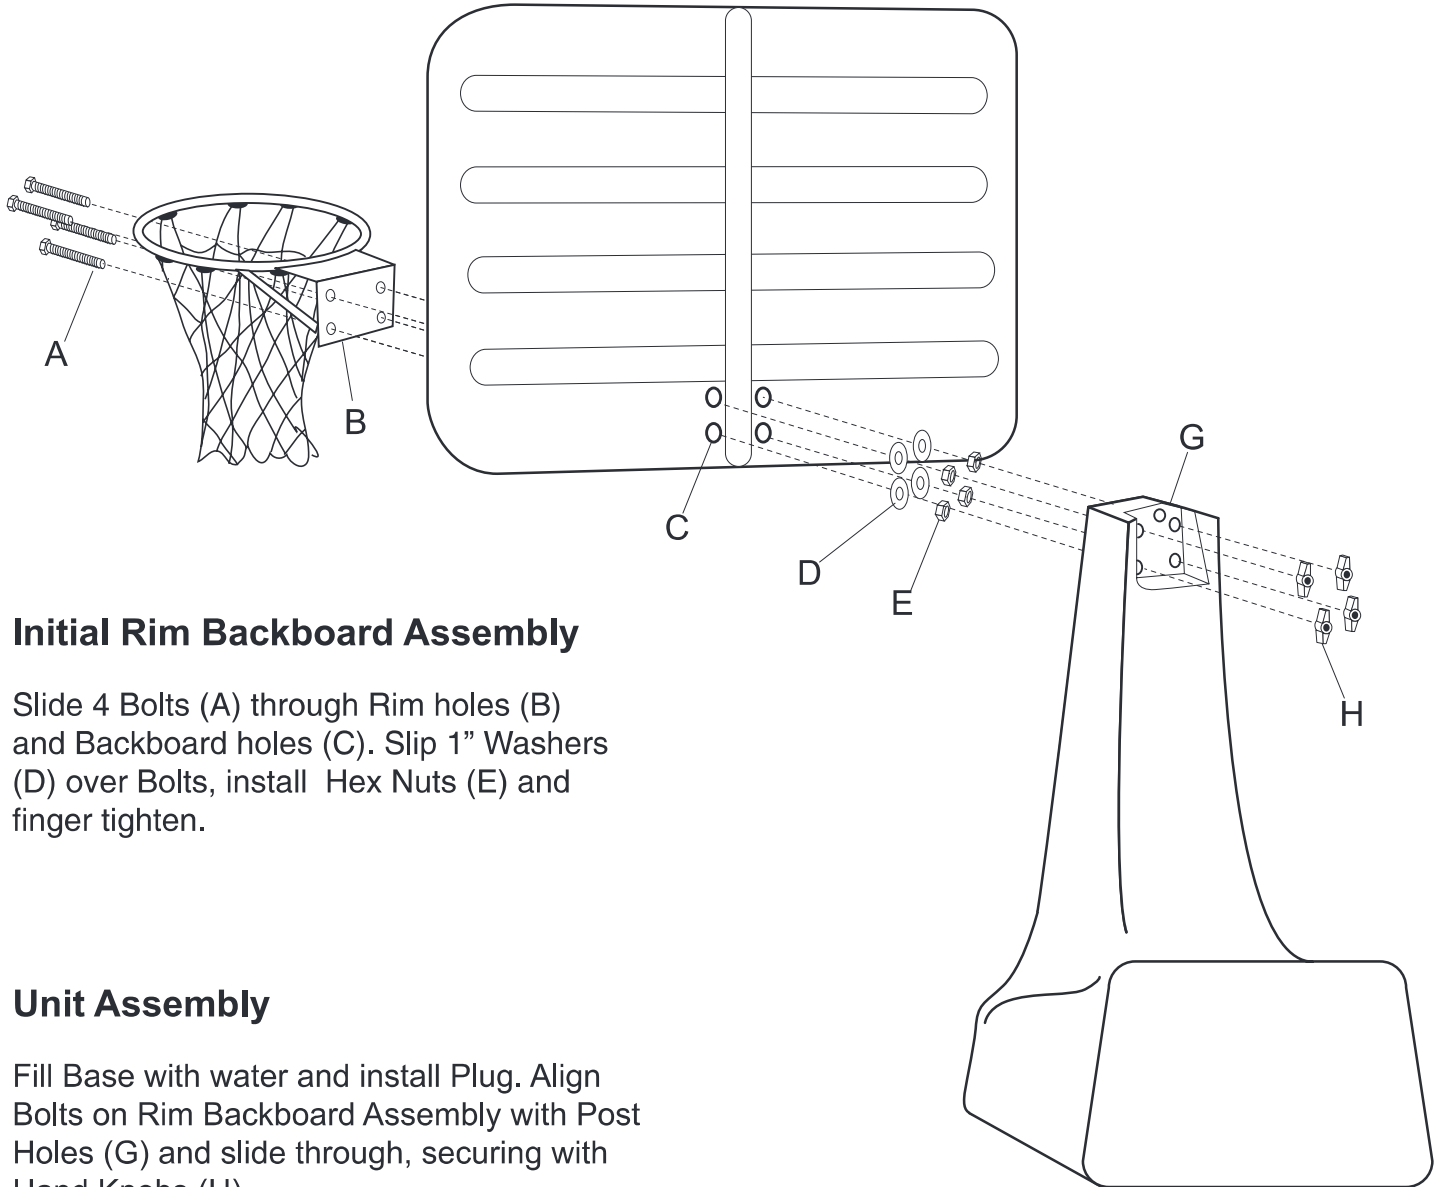

Initial Rim Backboard Assembly

Slide 4 Bolts (A) through Rim holes (B) and Backboard holes (C). Slip 1" Washers (D) over Bolts, install Hex Nuts (E) and finger tighten.

Unit Assembly

Fill Base with water and install Plug. Align Bolts on Rim Backboard Assembly with Post Holes (G) and slide through, securing with Hand Knobs (H).



For assistance call
1-800-798-9646

Parts List

WHITE HAND KNOBS.....	4
BOLTS (1/4 X 2).....	4
FENDER WASHERS.....	4
NUTS	4
BASE PLUG.....	1
INFLATION NEEDLE.....	1